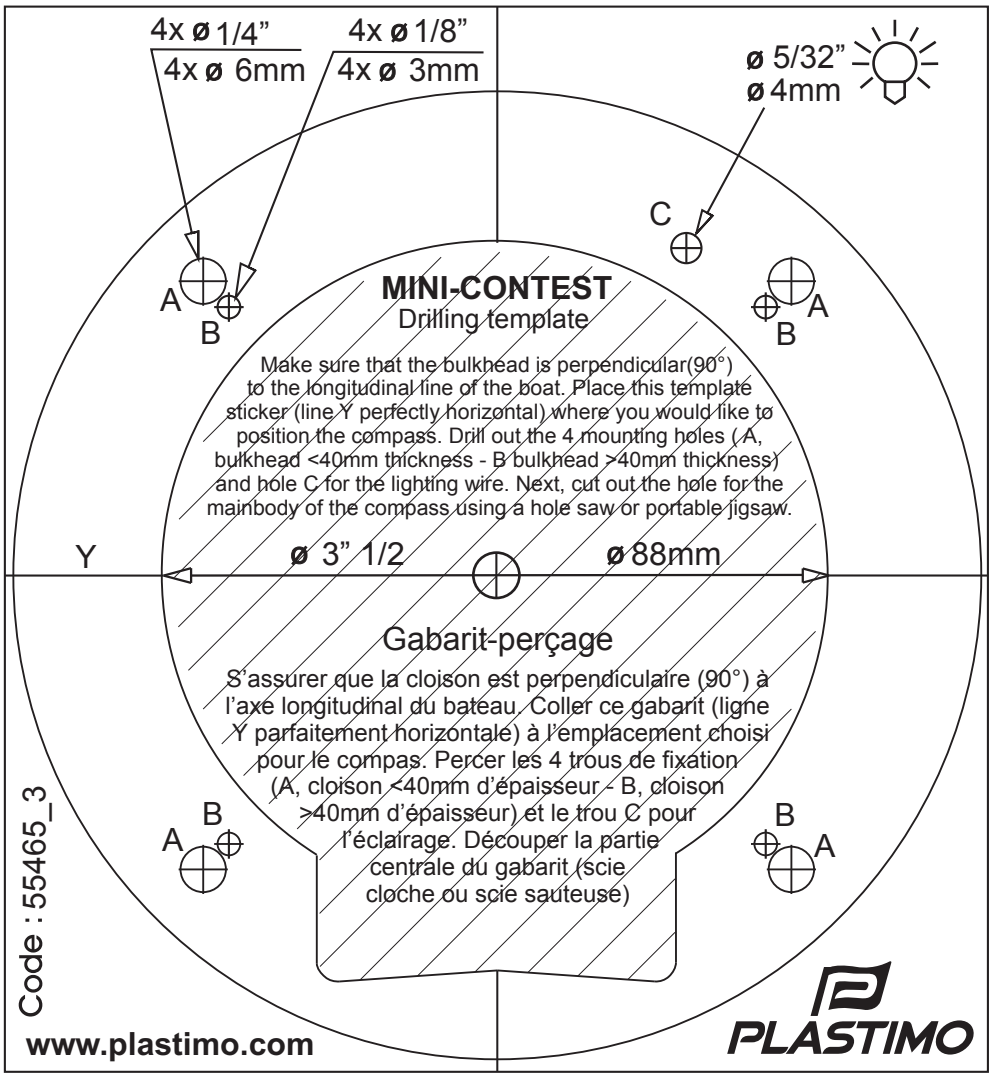
4x ø 1/4”
4x ø 6mm
4x ø 1/8”
4x ø 3mm
ø 5/32”
ø 4mm
C
A
B
A
B
MINI-CONTEST
Drilling template
Make sure that the bulkhead is perpendicular(90°) to the longitudinal line of the boat. Place this template sticker (line Y perfectly horizontal) where you would like to position the compass. Drill out the 4 mounting holes (A, bulkhead <40mm thickness - B bulkhead >40mm thickness) and hole C for the lighting wire. Next, cut out the hole for the mainbody of the compass using a hole saw or portable jigsaw.
Y
ø 3” 1/2
ø 88mm
Gabarit-perçage
S’assurer que la cloison est perpendiculaire (90°) à l’axe longitudinal du bateau. Coller ce gabarit (ligne Y parfaitement horizontale) à l’emplacement choisi pour le compas. Percer les 4 trous de fixation (A, cloison <40mm d’épaisseur - B, cloison >40mm d’épaisseur) et le trou C pour l’éclairage. Découper la partie centrale du gabarit (scie cloche ou scie sauteuse)
B
A
B
A
Filet technique pour coupe
Code : 55465_3
www.plastimo.com
PLASTIMO